

Remote controller

Remote controller

The remote controller transmits signals to the system.

1 MODE

Press this button to select the operation mode.

3 SLEEP

Used to set or cancel Sleep Mode operation.

6 SUPER

Used to start or stop the fast cooling/heating. (Fast cooling operates at high fan speed with 16°C (61°F) set temp automatically ; Fast heating operates at auto fan speed with 30°C (86°F) set temp automatically)

8 ON TIMER

Used to set or cancel the timer operation.

9 QUIET

Used to set or cancel Quiet Mode operation.

11 OFF TIMER

Used to set or cancel the timer operation.

12 SMART (invalid for multi system)


Used to enter fuzzy logic operation directly when the unit is on .

13 DIMMER

When you press this button, all the display of indoor unit will be closed. Press any button to resume display.

14 CLOCK

Used to set the current time.

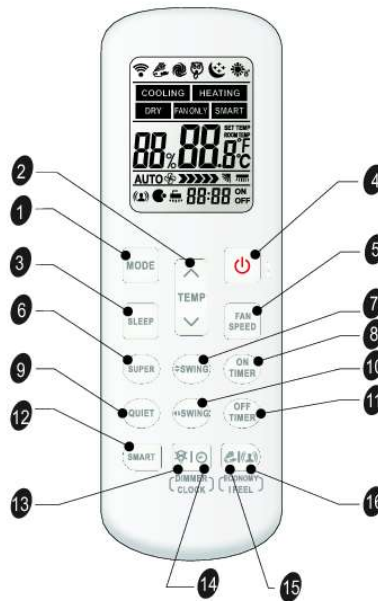

15 ECONOMY

Used to set or cancel Economy Mode operation.

2 + 7 8°C HEAT (optional)

Used to start or stop 8°C HEAT mode.

2 TEMP

Used to adjust the room temperature and the timer, also real time.

4 POWER

The appliance will be started when it is energized or will be stopped when it is in operation, if you press this button.

5 FAN SPEED

Used to select fan speed in sequence auto, higher, high, medium, low and lower.

7 SWING

Used to stop or start vertical adjustment louver swinging and set the desired up/downairflow direction.

10 SWING

Used to stop or start Horizontal adjustment louver swinging and set the desired left/right airflow direction.

16 IFEEL

Press to set IFEEL Mode operation. In IFEEL mode, the Air Conditioner operates basis temperature sensor fitted in remote instead of machine. Advice to use IFEEL mode and the remote put where the indoor unit receive signal easily. Press this button above 5 seconds, start or stop IFEEL mode.

Indication symbols on LCD:

COOLING Cooling indicator	DRY Dry indicator	FAN ONLY Fan only indicator	HEATING Heating indicator	SMART Smart indicator
Auto Auto fan speed	Higher fan speed	High fan speed	Medium fan speed	Low fan speed
Lower fan speed	Quiet indicator	Economy indicator	Super indicator	Sleep indicator
IFEEL	Display temperature	Display set timer	Display current time	8°C Heat indicator

Note: Each mode and relevant function will be further specified in following pages.